




WWW.DUOLABS.COM


Connection diagram from Cas Interface Main Unit to Nextwave CI 2500 C
Revision 1.0 - Errata corrige on last version pin A and E must be swapped!
Here comes the correct diagram.



Inside Nextware CI 2500 C

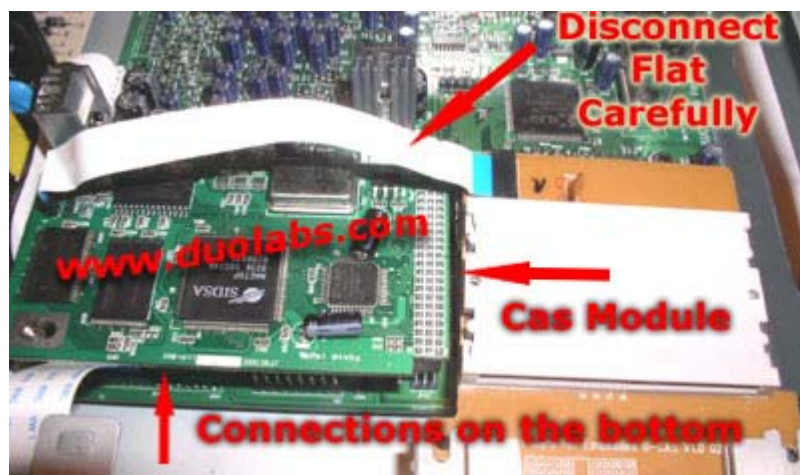

Cas Interface Main Unit

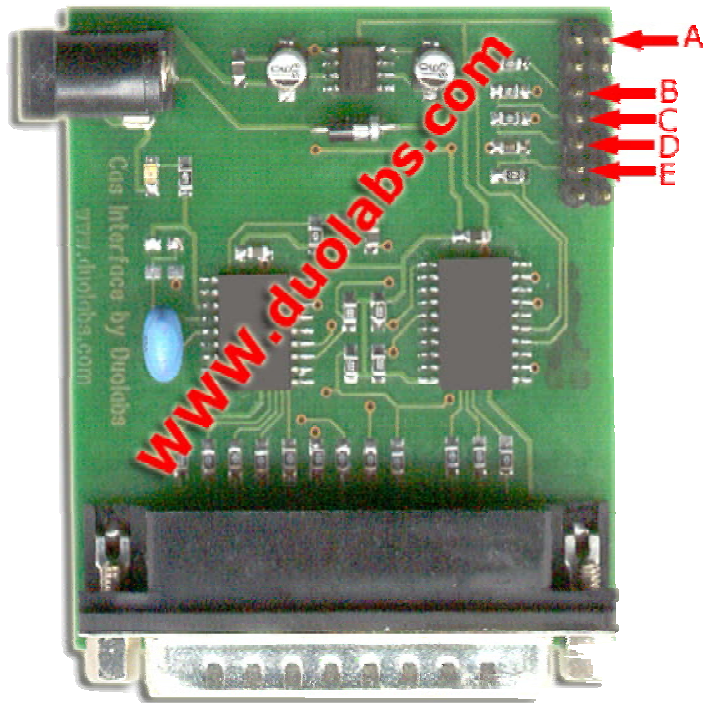

Internal Cas of Nextwave
CI 2500

